









T3 for Telecaster (3-Pickup) (3-FICKUP)

Volume (push for alt)

## Turnstyle Switch

### **Normal**

- 5) Neck
- 5) Parked Wah
- 4) Fat Neck+Middle 4) Gretsch
- 3) Bridge+Neck
- 3) Tele Thinline
- 2) Bridge+Middle
- 2) P-90

1) Bridge

1) Series (Humbucker)

Tone

Copyright © 2015 Turnstyle Switch, LLC. All Rights Reserved



### T3 for Telecaster

# Installation

#### **Tools Needed:**

- Wire-Cutters / Wire-Strippers
- Philips Screwdriver
- Small Flat-Blade Screwdriver

#### **Prep Work:**

- Remove existing control plate (be sure to keep the two screws)
- Strip Pickup Wire Insulation Ends to expose 1/4" of bare wire
- If your neck pickup has the metal cover shorted to the negative pickup lead, remove the jumper wire and run a separate ground wire to the point indicated with an arrow in the picture to the right.

### **Installation:**

- Connect Pickup Wires, Output Jack, Bridge Ground Wire, and Neck Pickup Shield Wire (if applicable) to Control Plate
- Install the new Turnstyle Switch Plate into the control cavity of the guitar
- Install the two original screws to hold down the control plate



